



WWW.IGT-LPG.COM

IGT WORLD WIDE



"Striving for perfection"
this motto summarizes how we focus
on maximizing domestic gas safety.

INTEGRATED GAS (C) TECHNOLOGIES PVT. LTD.

Plot 84, ALEAP, Ind Area Gajula Ramaram, Hyderabad - 500 333 - India
Phone: 91-7702142211 | E-mail: service@igct-lpg.in | www.igt-lpg.com

Safety Features



FOR DETAILED
VIDEO INSTRUCTIONS
SCAN QR CODE.

OR SEARCH ON:
YouTube / IGT LPG REGULATORS

5

25+ MILLION
SAFE AND HAPPY FAMILIES

**GET SAFE...
GET IGT!**



- Do not try to remove the regulator in ON position ever.
- Do not move the cylinder during operation.
- Do not change LPG cylinders in the presence of open lights or flames.
- Do not use any tools for installation.



**L.P.G
REGULATOR**
A126IP-M

INSTRUCTION MANUAL

REGULATOR + MANOMETER



Thank you for choosing IGT Products. Please read the following instructions carefully before use.

Features

Technical Information	1
Steps For Installation	2
Low Level Indicator	3
Safety Features	5

For further best practice advise see www.igt-lpg.com

Technical Information


Inlet size	26mm
Outlet size	8mm
Capacity	1.5 kgs/h
Excess flow	Yes
Regulator size	76mm
Leak & level indicator	Yes



- Check the valve gasket on the new full gas cylinder before connecting the regulator. The gasket shall be intact and in good condition to enable ceiling to the regulator spindle.
- If the gasket or the gas valve is not in good condition ask your gas dealers to replace it with another cylinder. Start the installation:

1

Steps For Installation

-  Fit the regulator hose to the outlet nozzle. Use water and liquid soap for lubrication of the hose. Insert firmly and clamp it using the hose clamp.
-  In total absence of any flame remove the seal cap from the cylinder valve.
-  Press the push button horizontally, mount the regulator on the cylinder press the regulator firmly down and release.
-  Turn On by turning the lever, after ensuring that regulator is connected firmly on the cylinder.
-  To replace the cylinder turn OFF the lever dismount by horizontally pressing push button and pull off the regulator vertically.

For further best practice advise to see video on [YouTube](https://www.youtube.com) / IGT LPG REGULATORS

2

Low Level Indicator



EMPTY (Blue) Cylinder empty no more liquid Gas. Do not use before cylinder is re-filled. Pressure less than 0,3 bar.

LOW (Yellow) Early warning – Plan re-fill soonest. Liquid level estimate 0,2-0,8 kg ~ 1 to 4 hr use. Pressure between 0,3 and 1,3 bar.

HIGH (Green) Sufficient level of gas inside cylinder. Ready to go on. Estimated level of gas min. 1kg ~ 5 hr use. Pressure between 1,3 and 7,5 bar.

3